

**Step #1**


Stand the black risers on the floor, making sure the flat surface of the riser is pointing outward.

**Step #2**

Loosely attach the top and bottom treads on the two black risers making sure **NOT** to snap the tread into place yet (this will be completed in step #3). **Note: for spas with flat sided skirting, the tread with the flat side will need to be positioned as the top tread. For spas with curved skirting, the tread with the inward curve will need to be positioned as the top tread.**

**Step #3**

Firmly attach the top and bottom treads to the risers, making sure each tread snaps firmly in place.

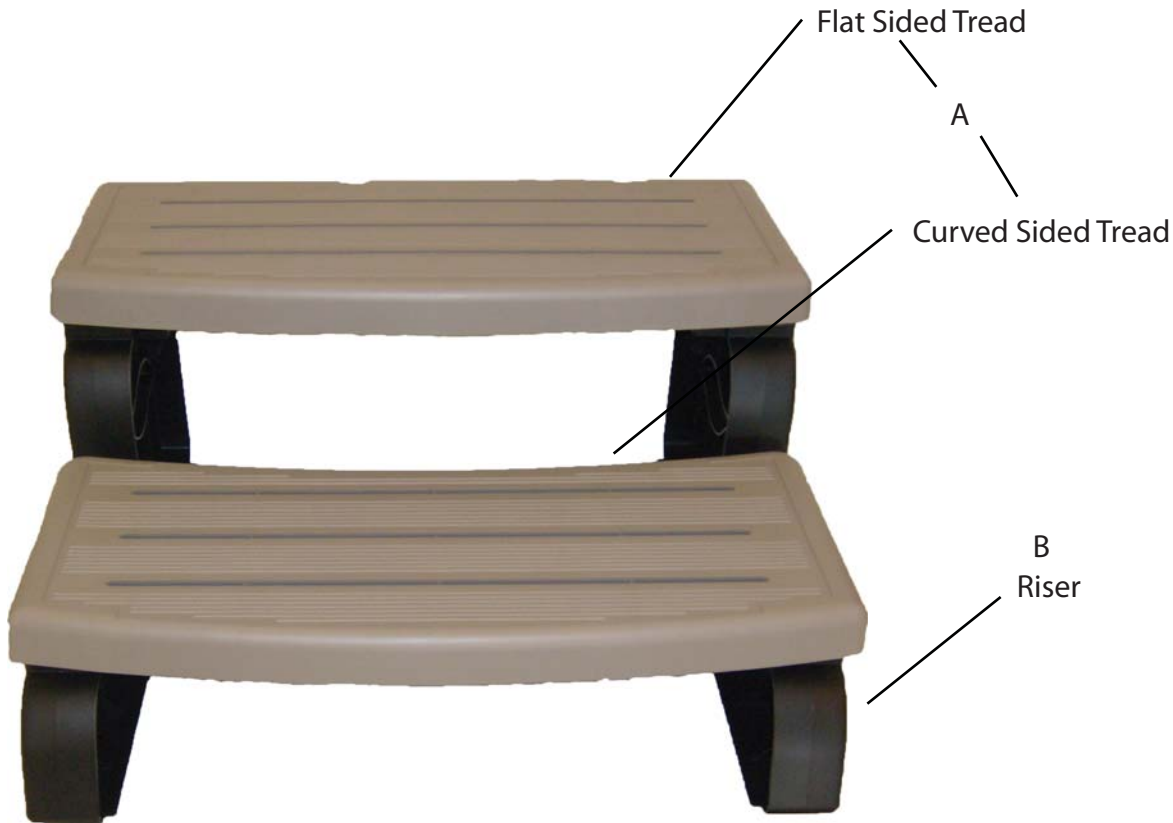

ITEM	PART#	DESCRIPTION	QTY
A	TREAD-DSII	DURASTEP II TREAD SET	1
B	RISER-DSII	DURASTEP II RISER SET	1